Coded Non Contact Safety Magnetic Switch ZCode-CC/CCE(F)

User Manual

Correct Use



Function

ZCode-CC/CCE(F) are coded tamperproof magnetic safety switches with transistor output. They are simple to install, completely dust- and waterproofed and can switch with no contact. Anything other than the ZCode actuator will not trigger the switch. In combination with a Safety relay (e.g. ZANDER SR-Series, MINOS SL-Series), a safety logic device (e.g. ZANDER MINOS SL-Series), or a safety PLC (e.g. ZANDER TALOS-Series) the switches are self-monitoring with short-circuit monitoring. (ZCode-CCE(F) as stainless steel type for rough and hygiene critical environments and applications)

- Coded sensor with LED high degree of anti tamper.
 2 non-contact safety outputs, 1 non-contact auxiliary
- output
 Compatible to most safety logic devices, safety relays and safety PLCs
- Easy to install
- Can also be used on poorly aligned safety doors
- Wide tolerance to misalignment
- Fully sealed enclosure protection IP67 and IP69K
- Series Connection up to 3 switches to one ZANDER SR"C"./ MINOS SD1E safety relay or one ZANDER MINOS SL"1" safety logic
- Certified up to PL e, Cat. 4 according to EN ISO 13849-1, Construction type 4 according to ISO 14119)
- ZCode-CCE(F) Stainless Steel switches for applications in rough environments and high hygiene requirements, e.g. food, pharma and process industry (CIP, SIP cleaning)
- · High operational life without moving or touching parts

Coded magnetic non contact safety switches ZCode are designed to interlock hinge, sliding or removal guard doors

The outputs of the ZCode will be switched off, if the guard

door is opened whereupon the safety outputs of the wired emergency stop device shut down the system securely.

The ZCode operates contactless with an coded magnetic

sensing system which provides a wide sensing distance

(up to 10 mm) and provides a high tolerance to mis-

alignment. They can be fitted behind stainless steel and can operate from 4 directions even in dusty, hot and humid

M4 mounting bolts must be used to fix the switches and

actuators. Tightening torque for mounting bolts to ensure reliable fixing is 2 Nm. Always mount on to non ferrous materials. The recommended setting gap is 5 mm. The safety switches must not be used as a mechanical

stop. The actuators must not be allowed to strike the switch. An adjustment by striking with a hammer is inadmissible. Do not mount adjacent switches or actuators closer than 30 mm. Typical misalignment tolerance after setting is 5 mm in any plane/direction (see Figure 3).

Super compact dimensions

Figure 1: Application positions at protection device

(see Fig. 1).

environments



English translation



ZCode-CCE

ZCode-CC





ZCode-CCEF

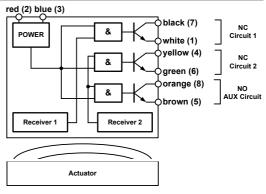


Figure 2: Block Diagram

 



Figure 3: 5 mm misalignment tolerance after setting

Safety Precautions

Mounting

- Installation and commissioning of the device must be carried out only by competent personnel with appropriate experience of machine control integration, who have read and understood these user manual .
 Observe the country-specific regulations when installing
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this user information, otherwise there is a risk that the safety function will be lost.
- It is not allowed to open the device, tamper with the device or bypass the safety guards.
- All relevant safety regulations and standards are to be observed.
- It is the responsibility of the user to ensure the correct overall functionality of its systems and machines.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.
- The Risk Assessment for the particular application should include the risk of spare actuators. Spare actuators should not be readily available and must be securely controlled.

 Electrical Connection The installation of all ZCode safety switches must be in accordance with a risk assessment for the individual application. For monitoring the ZCode switches, the two redundant outputs must be connected to a commercially available safety emergency stop relay (e.g. ZANDER SR"C", MINOS SD1E), a safety logic device (e.g. ZANDER MINOS SL1D / SL1E) or a dual channel connection has to be made with the inputs of a safety PLC (e.g. ZANDER TALOS-Series).



| <u>Colour</u> | <u>Signal</u> |
|---------------|---------------------------|
| red | operating voltage, 24V |
| blue | operating voltage, 0V |
| black | safety contact 1, NC |
| white | safety contact 1, NC |
| yellow | safety contact 2, NC |
| green | safety contact 2, NC |
| orange | auxiliary contact AUX, NO |
| brown | auxiliary contact AUX, NO |
| | |

ZANDER


Figure 4: Terminals M12 Connector

Applications/ Wiring Diagrams

SL1L Safety Relay, wiring example:

wiring example: ZANDER SR "C" Up to 3 ZCode switches can be connected to one commercially available emergency stop safety relay or safety logic device (e.g. Fig. 5 to 10: wiring examples ZCode with ZANDER SR "C", MINOS SD1E and MINOS SL1D / SL1E).

When several sensors are placed in series, make sure that the safety relay or the safety logic is applied with sufficient supply voltage of min. 24 V. (relevant datasheets must be taken into account!)

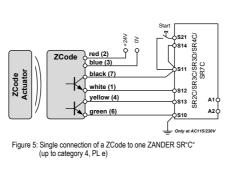

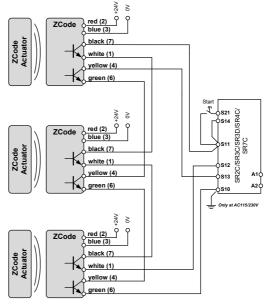


Figure 7: Connecting **up to 3 ZCode in series** to one ZANDER SR"C" (up to category 3, PL d)

Safety Relay, wiring example: ZANDER MINOS SD1E

 


Figure 6: Single connection of a ZCode to one ZANDER MINOS SD1E (up to category 4, PL e)

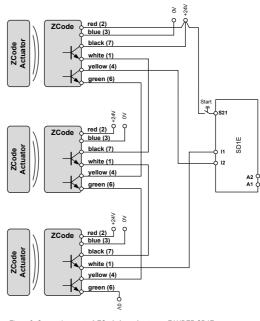
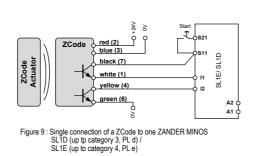


Figure 8: Connecting up to 3 ZCode in series to one ZANDER SD1E (up to category 3, PL d) P08 E61-319-00

Safety Logic, wiring example: ZANDER MINOS SL1E/SL1D




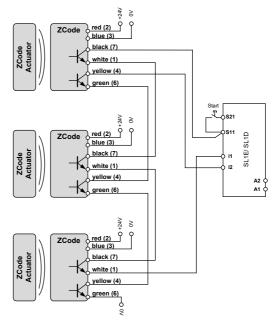


Figure 10: Connecting **up to 3 ZCode in series** to one ZANDER MINOS SL1D / SL1E (up to category 3, PL d)

Safety PLC, wiring example: ZANDER TALOS standard programs PR07 and PR08

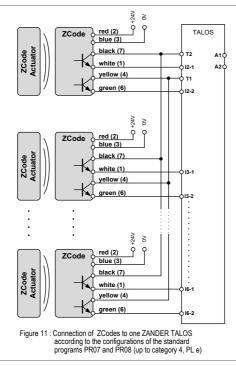

Commissioning Procedure

1. Mounting the device:

Mount the device on the safety gate according to the instructions listed under "Mounting". Pay attention to the correct fitting and distance between the switch and actuator.

2. Wiring:

Wire the switch according to your application and performance level with the used safety relay, safety logic or PLC (see e.g. Fig. 5 to Fig. 11).

Caution: The wiring instruction in the user information of the used safety device must be considered. Wiring only in de-energized state.

3. Starting the device:

Switch on the operating voltage for the safety switch and safety device.

4. Check your application:

After installation always check each switch function by opening and closing each guard individually in turn. Ensure that the green LED at the switch and also the respectively diagnostic LEDs of the safety device are lit while the door is closed and are extinguished when the door is open.

5. Triggering safety function:

Check that the machine stops and cannot be re-started when a switch or a door is open.

P08 E61-319-00

Attention: During commissioning, the items listed under "Electrical Connection" must be considered. (see above)

| Maintenance | Monthly: Check alignment of actuator and look for signs of mechanical damage to the switch casing. For applications were infrequent guard access is foresee- able, the system must have a manual function test to detect a possible accumulation of faults. At least once per month for PL e Cat. 3/4 or once per year for PL d Cat. 3 (ISO 13849-1). Where possible it is recommended that the control system of the machine demands and monitors these tests, and stops or prevents the machine from starting if the test is not done (ISO 14119). | Check each switch function by opening and closing each guard individually in turn and ensure that the green LED on the switch and the appropriate LED's on the Safety Relay or Control Device are illuminated when the switch is closed and are extinguished when the switch is open. Check that the machine stops and cannot be re-started when each switch is open. Never repair any switch, actuator or integral cables. Replace any switch displaying signs of mechanical damage to casing or cables. The device is otherwise maintenance free, provided that it was installed properly. |
|---|---|---|
| What to Do in Case of a Fault? | Device does not switch on: Check the wining by comparing it to the wining diagrams. Check the safety switch for correct adjustment. Check if the green LED is lit when the switch is closed. Check the operating voltage. If the fault still exists, perform the steps listed under | "Commissioning Procedure". If these steps do not remedy the fault either, return the device to the manufacturer for examination. Opening the device is impermissible and will void the warranty. |
| Safety Characteristics According to EN ISO 13849-1 EN ISO 62061 | The device is certified according to DIN EN ISO 13849-1 up to a Performance Level of PL e . The specified PL (for applications according to Fig. 5 to Fig. 11) values were determined under the following worst-case conditions for a guard door monitoring. | |
| | Safety Characteristics according to DIN EN ISO 13849-1 / | EN 62061 |
| | Performance Level e (Depending on the application. | Soo Eig E to Eig 11) |
| | Performance Level e (Depending on the application. Category 4 | |
| | MTTFd 866 years | |
| | Safety Integrity Level SILCL 3 | |
| | PFHd (1/h) 2,6 x 10 ⁻¹⁰ (1/h) | |
| | Proof Test Interval 20 years | |
| Techn. Data | Correspondents to the standards | ISO 13849-1; EN 62061; EN ISO 14119; |
| | | EN 60204-1; EN 60947-5-3; UL 508; CSA-C22.2 No.14 |
| | Approvals | CE, TÜV, UL |
| | Power Supply | DC 24 V, +/- 10 %, max. 25 mA |
| | Contact rating safety outputs | DC 24 V, max. 200 mA, short circuit proof |
| | Contact rating auxiliary output | DC 24 V, max. 200 mA, short circuit proof |
| | Contact release time | max. 2ms |
| | Dielectric withstand | AC 250 V |
| | Insulation resistance | 100 MOhm |
| | Recommended setting gap | 5 mm |
| | Switching distance, max. | Sao 10 mm Close / Sar 20 mm Open |
| | Tolerance to misalignment | 5 mm in any direction from 5 mm setting gap |
| | Switching frequency | max. 1,0 Hz |
| | Approach speed | 200 mm/min - 1000 mm/s |
| | Body material | Red Plastic / Stainless Steel 316 |
| | Dimensions | 88 x 20 x 17 mm |
| | Weight | approx. 200 g (Plastic) / approx. 300 g (Stainless Steel) |
| | IP Protection | IP67, IP69K (with M12-connector IP67) |
| | Temperature Range | -25 °C to +80 °C Plastic, +105 °C Stainless Steel (CIP, SIP cleaning) |

cleaning) 11 ms 30 g according to IEC 68-2-27 10 - 55 Hz 1 mm according to IEC 68-2-6 PVC 8-core, 6 mm O.D. for 2 NC/ 1NO, 0.25 mm² each 2 x M4 screws; tightening torque max. 2 Nm; any position

ZANDER


P08 E61-319-00

Shock Resistance

Cable Type

Mounting

Vibration Resistance

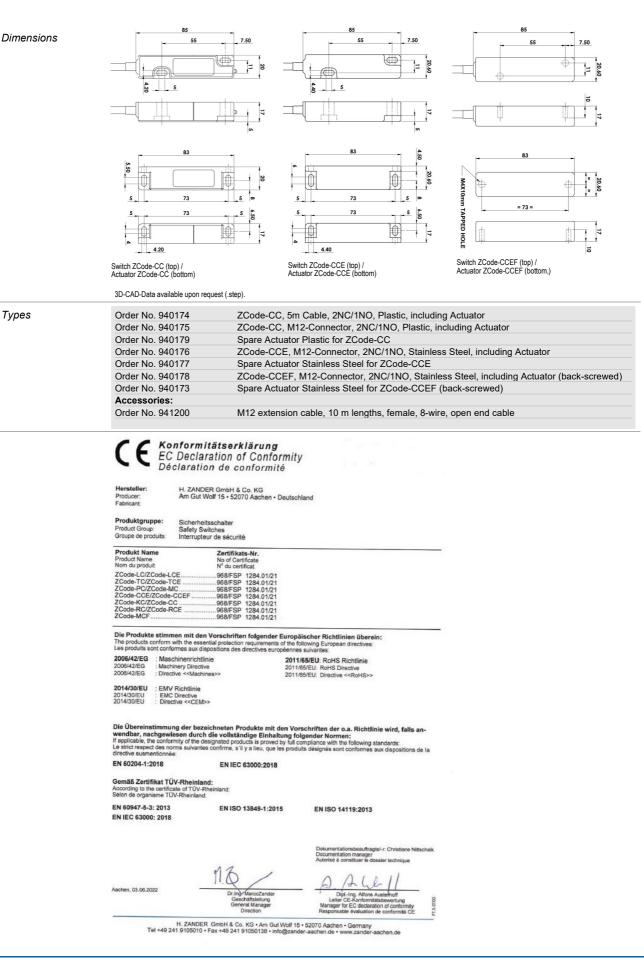

P08

E61-319-00

ANDER