

## Operating Instructions



### Correct Use



SR3AD is a safety switching device specially designed for sensors with antivalent logic (normally open / normally closed combination). In case of danger, the moving parts of a machine or system can be quickly and safely shut down via three safe relay contacts.

The SR3AD is used to monitor safety gates and safety guards on machines and systems. The SR3AD can be used to monitor safety gates on machines and plants in accordance with EN ISO 13849-1, EN IEC 62061 and in systems in accordance with IEC 61508 and IEC 61511. In addition, it has been tested and approved by TÜV-Rheinland for use in burner applications in continuous operation in accordance with EN 50156-1 and EN 746-2 up to SIL 3.

- 3 redundant safety contacts  
1 auxiliary contact
- Connection of:
  - Reed contact sensors
  - Safety door switches
  - Safety position switches
 each with NO / NC combination.
- Dual channel control
- Feedback loop for external contactors or extension modules
- Cyclical monitoring of the output contacts



- LED indicators for power and status
- Automatic or manual start
- Short-circuit monitoring and ground fault monitoring
- Up to PL e, category 4, SIL 3

### Function

The safety emergency stop relay SR3AD is designed for the safe isolation of safety circuits in accordance with EN 60204-1 and thus performs the safety-related stop function up to PL e / SIL 3 in accordance with EN ISO 13849-1 / IEC 61508. If the emergency stop circuit (e.g. safety door or emergency stop button) is closed, the machine can be enabled via the SR3AD. When the safety function is requested via the emergency stop circuit (e.g. safety door open), the enable current paths of the SR3AD are opened immediately and thus safely switch off the machine. The redundant use of forcibly guided relays ensures that a single fault within the device does not lead to the loss of the safety function and that this is detected by cyclical self-

monitoring the next time the safety function is requested.

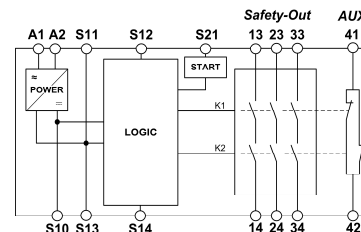


Fig. 1 Block diagram SR3AD

### Installation

As per EN 60204-1, the device is intended for installation in control cabinets with a minimum degree of protection of IP54. The following should be noted:

- Mounting on 35 mm rail according to EN 60715 TH35
- Ensure sufficient heat dissipation in the control cabinet
- With the AC 115 V / 230 V version, a minimum distance of 10 mm to adjacent devices must be maintained

**Note:** Spacer from ZANDER AACHEN (Art. No. 472596) for defined distances - See section Accessories.

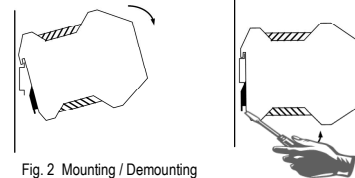


Fig. 2 Mounting / Demounting


### Safety Precautions



- Installation and commissioning of the device must be performed **only by authorized personnel** and who has read and understood this operating instructions.
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this operating instructions, otherwise there is a risk that the safety function will be lost.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- The contact protection and the insulation of the supply cables must be designed for the highest voltage to the device.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- All relevant safety regulations and standards are to be observed.
- The overall concept of the control system in which the device is incorporated must be validated by the user.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.
- Note down the version of the product (see label "Ver.") and check it prior to every commissioning of a new device. If the version has changed, the overall concept of the control system in which the device is incorporated must be validated again by the user.
- The year of manufacture can be found on the type label on the device. It is located at the end of the line of the voltage specification, below the ID number.

### Electrical Connection

- When using the 24V version, a safety transformer according to EN 61558-2-6 or a power supply unit with electrical isolation from the mains must be connected
- Observe the instructions in the section "Tech. Data"
- A suitable protective circuit for inductive loads (e.g. free-wheeling diode) must be provided
- If the device does not function after commissioning, it must be returned to the manufacturer unopened. Opening the device will void the warranty
- The auxiliary contact 41-42 may not be used as a safety contact



- A1: Power supply
- A2: Power supply
- S10: PE connection for AC 115V/230V versions
- S11, S13: DC 24 V Control voltage
- S21: Control line start
- S12: Control line channel 1
- S14: Control line channel 2
- 13-14: Safety contact 1
- 23-24: Safety contact 2
- 33-34: Safety contact 3
- 41-42: Auxiliary contact


Fig. 3 Terminals

## Operating Instructions


### Applications

Depending on the application the device must be wired as shown in Fig. 4 to Fig. 11.

### Safety Circuit

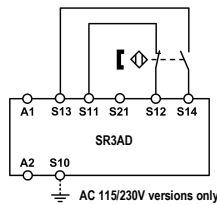

**Fig. 4:**  
Two-channel safety door monitoring via sensor with antivalent reed contact outputs, with short circuit and ground fault monitoring.  
(Category 4, up to PL e / SIL 3)

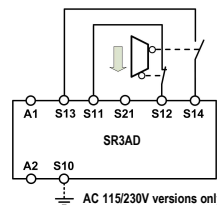


**Fig. 5:**  
Dual channel safety guard monitoring with short circuit and ground fault monitoring.  
(Category 4, up to PL e / SIL 3)


### Notice:

- In order to activate earth fault monitoring, S10 must be connected to PE (protective earth) on the AC 115/230 V devices
- For AC/DC 24 V devices, the earth connection of the power supply unit must be on the secondary side
- The start circuit must be wired corresponding to the application according to Fig. 3 or Fig. 4.

### Start Behaviour




**Fig. 6:**  
Monitored manual start.  
It is monitored that the start button has been opened before the safety switch is closed.  
**Prerequisite:**  
Power supply may not be interrupted.




**Warning:**  
Safety contacts will be activated immediately at power-on.

**Fig. 7:**  
Automatic start.  
Maximum allowable delay when closing the safety switch at S12 and opening at S14:  
S12 before S14: 300ms  
S14 before S12: no limit

### Feedback Loop

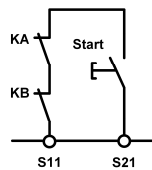


**Fig. 8:**  
Feedback loop for monitored manual start.  
The feedback loop monitors contactors or expansion modules.

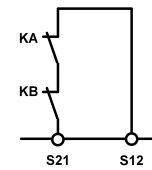


**Fig. 9:**  
Feedback loop for automatic start.  
The feedback loop monitors contactors or expansion modules.

### Power Supply and Safety Contacts

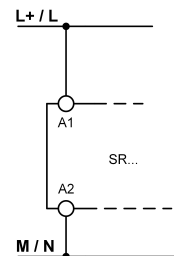

**Fig. 10:**  
Connection of the power supply at the terminals A1 and A2.  
(Power supply corresponding to "Technical Data")

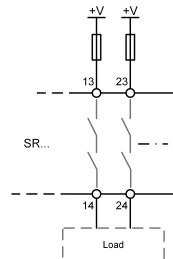

**Fig. 11:**  
Connection of loads to be switched to the safety contacts.  
(Sample contact configuration. Maybe different depending on device type.  
Switching voltages "+V", according to technical data)

### Commissioning Procedure

**Advice:** Follow the guidelines in "Electrical Connection" during the start-up.

#### 1. Safety circuit:

Connect the safety inputs according to one of the wiring diagrams in "Applications" (Fig. 4 or Fig. 5).

#### 2. Choose start mode:

Wire the start circuit according to the examples in Fig. 6 or 7 to set the starting behavior.

#### Warning:

If "Automatic start" is set, bear in mind that the safety contacts will switch immediately after the power supply is connected. If "Monitored manual start" is set, the start button must be opened after wiring.

#### 3. Feedback loop:

If your application provides for external contactors or expansion modules, connect them to the device according to the examples in Fig. 8 or 9.

#### 4. Power supply:

Connect the power supply to A1 and A2 (Fig. 10).

#### Caution:

Carry out the wiring only in de-energized state.

#### 5. Starting the device:

Switch on the operating voltage.

#### Warning:

If the "Automatic start" starting behaviour is set, the safety contacts will close immediately.

If the "Monitored manual start" starting behaviour is set, close the start button to close the safety contacts.

LEDs **Pwr**, **K1** and **K2** are lit.

#### 6. Triggering safety function:

Deactivate the safety inputs by actuating the connected safety switch. The safety contacts will open immediately. The LEDs **K1** and **K2** go out.

#### 7. Reactivation:

Activate the safety inputs. If "Automatic start" is selected, the safety contacts will close immediately.

If the start behaviour "Monitored manual start" is set, close the start button to activate the safety contacts.

## Operating Instructions

### Check and Maintenance

The following checks are regularly required to ensure proper and continuous functioning:

- Check the switching function.
- Check for signs of manipulation and safety function bypassing.
- Check if the device is mounted and connected securely.
- Check for soiling.

Check if the safety device is working properly, in particular:

- Every time after initial commissioning.
- Every time after replacing a component.
- After every fault in the safety circuit.

According to CNB / M / 11.050, a request for the safety function is recommended at the following intervals:

- Once a month for applications up to PL e with Cat. 3 or Cat. 4 or SIL CL3, SIL 3 with HFT = 1
- Once a year for applications up to PL d with Cat. 3 or SIL CL 2, SIL 2 with HFT = 1

### What to do in Case of a Fault?

#### Device does not switch on:

- Check the wiring by comparing it to the wiring diagrams.
- Check the safety switch for correct function and adjustment.
- Check whether the safety inputs are activated.
- Check whether the start button (manual start) is closed.
- Check the operating voltage at A1 and A2.
- Is the feedback loop closed?

#### Device cannot be switched on after a safety request:

- Emergency stop circuit was closed again.
- Was the start button opened before closing of the emergency stop circuit (manual start)?
- Is the feedback loop closed?

If the fault still exists, perform the steps listed under "Commissioning Procedure". If these steps do not remedy the fault either, return the device to the manufacturer.

**Opening the device is not permitted and will void the warranty.**

### Technical Data

|  |   |
|--|---|
| In compliance with   | EN 60204-1; EN ISO 13849-1; EN IEC 62061; IEC 61511-1; IEC 61508, Parts 1-2 and 4-7; EN 746-2; EN 50156-1   |
| Operating voltage  | AC 230 V, AC 115 V 50-60 Hz; AC/DC 24 V; AC: 50-60 Hz   |
| Permissible deviation  | + / - 10 %  |
| Power consumption  | <b>DC 24 V</b> <b>AC 24 V</b> <b>AC 115 V / 230 V</b><br>2.3 W              4.5 VA              6.9 VA  |
| Control current S11-S12 / S13-S14  | < 60 mA / < 15 mA   |
| Safety contact configuration / Auxiliary contact configuration                         | 3 NO / 1 NC   |
| Max. switching voltage   | AC 250 V  |
| Contact rating of safety contacts (13-14, 23-24, 33-34), 6 switching cycles per minute | AC: 250 V, 2000 VA, 8 A for resistive load<br>250 V, 3 A for AC-15<br>DC: 30 V, 320 W, 8 A for resistive load<br>24 V, 3 A for DC-13<br>UL: B300 / R300<br>Max. total current 15 A (13-14, 23-24, 33-34) *) |
| Contact rating of auxiliary contact (41-42)  | AC: 250 V, 500 VA, 2 A for AC-12<br>DC: 30 V, 80 W, 2 A for resistive load  |
| Minimum contact load   | 5 V, 10 mA  |
| External fuses   | NO: 10 A gG or 6 A gG acc. to EN 50156-1 (Ch.10.5.5.3.4),<br>NC: 6 A gG   |
| Max. switch-on delay   | < 50 ms   |
| Max. delay on safety request   | Via S11-S12 or S13-S14: < 20 ms; via A1/A2: < 50 ms   |
| Recovery time  | < 500 ms  |
| Wire width   | 0.14 - 2.5 mm <sup>2</sup>  |
| Tightening moment (Min. / Max.)  | 0.5 Nm / 0.6 Nm   |
| Max. length of control lines   | 1000 m at 0.75 mm <sup>2</sup>  |
| Contact material   | AgSnO <sub>2</sub>  |
| Contact service life   | mech. approx. 1 x 10 <sup>7</sup>   |
| Rated impulse withstand voltage  | 2.5 kV (control voltage / contacts)   |
| Dielectric strength  | 4 kV (EN 60664-1)   |
| Rated insulation voltage   | 250 V   |
| Protection   | IP20  |
| Ambient temperature  | AC/DC 24 V: -15 °C to +55 °C *)<br>AC 115 V / 230 V: -15 °C to +55 °C (see total current limit curve)   |
| Degree of pollution / Overvoltage category   | 2 / 3 (EN 60664-1)  |
| Max. altitude  | ≤ 2000 m (above sea level)  |
| Weight   | approx. 230 g   |
| Mounting   | DIN rail according to EN 60715 TH35   |

\*) If several SR3AD under load are closely connected, the max. total current at an ambient temperature of T=20 °C is 9 A; at T=30 °C is 3 A; at T=40 °C is 1 A. If these currents are exceeded, a gap of 5 mm must be maintained between the devices.

## Operating Instructions

### Disclaimer and Warranty

Failure to comply with the above conditions for proper use, failure to follow the safety instructions or failure to carry out any maintenance work as required will result in a disclaimer of liability and loss of warranty.

### ATTENTION

We would like to point out that ensuring the availability of the system is the sole responsibility of the operator.

The SR3AD is a safety switchgear according to


- EN ISO 13849-1
- EN IEC 62061
- IEC 61508
- EN 50156-1
- EN 746-2
- IEC 61511-1

which branches to the safe state when the safety function is required. This means that the connected load is switched off as soon as a request via connected sensors or diagnostic measures register a dangerous state, e.g. caused by a component fault. Since process applications in particular have high availability requirements, limited availability can also have considerable consequences.

It is therefore recommended to stock a second unit to avoid long downtimes in such a case.

These are recommendations of the manufacturer, the evaluation of the importance of the system availability is solely the responsibility of the operator.


### Total Current Limit Curve

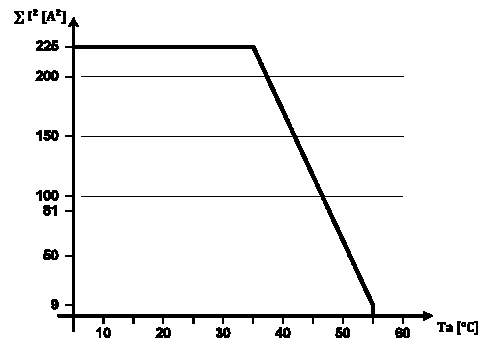

Total current limit curve depending on the ambient temperature for 115 V / 230 V variants with 10 mm gap between the devices.

$$\text{Total current: } \Sigma I^2 = (I_1 + I_2 + I_3)^2$$

### Dimension Drawing

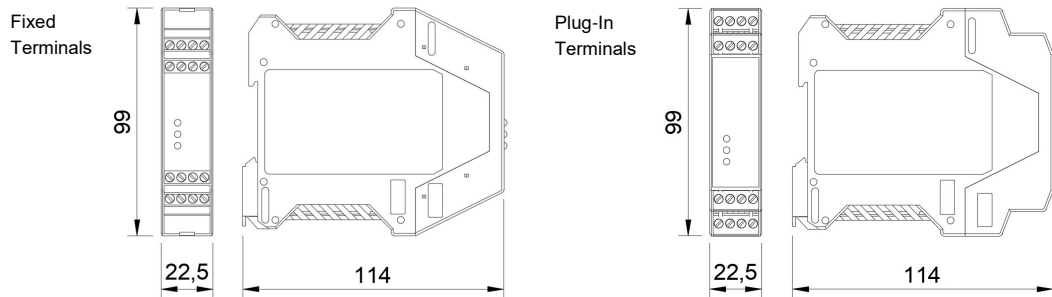

Note: Actual number of front LEDs may differ from the number shown in the drawing, depending on the variant.

### Variants

|                  |                                    |                                     |
|------------------|------------------------------------|-------------------------------------|
| Order No. 472300 | SR3AD, AC 230 V (50-60 Hz),        | fixed screw terminals               |
| Order No. 472301 | SR3AD, AC 115 V (50-60 Hz),        | fixed screw terminals               |
| Order No. 472302 | SR3AD, AC/DC 24 V, (AC: 50-60 Hz), | fixed screw terminals               |
| Order No. 474300 | SR3AD, AC 230 V (50-60 Hz),        | incl. plug-in screw terminals       |
| Order No. 474301 | SR3AD, AC 115 V (50-60 Hz),        | incl. plug-in screw terminals       |
| Order No. 474302 | SR3AD, AC/DC 24 V, (AC: 50-60 Hz), | incl. plug-in screw terminals       |
| Order No. 475300 | SR3AD, AC 230 V (50-60 Hz),        | incl. push-in twin spring connector |
| Order No. 475301 | SR3AD, AC 115 V (50-60 Hz),        | incl. push-in twin spring connector |
| Order No. 475302 | SR3AD, AC/DC 24 V, (AC: 50-60 Hz), | incl. push-in twin spring connector |

### Accessories

|                  |                         |                                      |
|------------------|-------------------------|--------------------------------------|
| Order No. 472592 | EKLS4,                  | set of plug-in screw terminals       |
| Order No. 472595 | EKLZ4,                  | set of push-in twin spring connector |
| Order No. 472596 | Spacer Electric Cabinet | rail spacer 5mm, PU = 12 pcs         |

### Safety Characteristics

#### Safety characteristics according to EN ISO 13849-1

| Load per contact                  | <= 1 A               | <= 2A                | <= 3A               |
|-----------------------------------|----------------------|----------------------|---------------------|
| Max. duration of use [Years]      | 20                   | 20                   | 20                  |
| Category                          | 4                    | 4                    | 4                   |
| PL                                | e                    | e                    | e                   |
| PFHd [1/h]                        | 1,2E-08              | 1,2E-08              | 1,2E-08             |
| nop [Cycles / year] AC-15 / DC-13 | ≤ 50.000 / ≤ 350.000 | ≤ 35.000 / ≤ 100.000 | ≤ 15.000 / ≤ 15.000 |

#### Safety characteristics according to IEC 61508 - High Demand

Conditions: Days of operation/year: 365; Hours/Day: 24; Switching-Cycle/Hour: 1; Maximum load AC-15 / DC-13

|                              |          |
|------------------------------|----------|
| Max. duration of use [Years] | 20       |
| Proof-Test-Intervall [Years] | 20       |
| PFH [1/h]                    | 9.86E-11 |
| SIL                          | 3        |

#### Safety characteristics for alternate 1oo1 structure for process industry - High Demand

Conditions: Days of operation/year: 365; Hours/Day: 24; Switching-Cycle/Hour: 1; Maximum load AC-15 / DC-13

|                      |          |
|----------------------|----------|
| Device type          | A        |
| HFT                  | 0        |
| SIL                  | 3        |
| SFF [%]              | 99.93    |
| $\lambda_{SD}$ [FIT] | 0        |
| $\lambda_{SU}$ [FIT] | 121.58   |
| $\lambda_{DD}$ [FIT] | 9.86     |
| $\lambda_{DU}$ [FIT] | 0.10     |
| PFH [1/h]            | 9.86E-11 |

#### Safety characteristics according to IEC 61508 - Low Demand

Conditions: Maximum load AC-15 / DC-13

|                              |          |
|------------------------------|----------|
| Max. duration of use [Years] | 20       |
| Proof-Test-Intervall [Years] | 9        |
| PFD <sub>AVG</sub>           | 1.04E-04 |
| SIL                          | 3        |

#### Safety characteristics for alternate 1oo1 structure for process industry - Low Demand

Conditions: Maximum load AC-15 / DC-13

|  |          |
|--|----------|
| Device type                              | A        |
| HFT                                      | 0        |
| SIL                                      | 3        |
| SFF [%]                                  | 97.34    |
| $\lambda_{SD}$ [FIT]                     | 0        |
| $\lambda_{SU}$ [FIT]                     | 121.43   |
| $\lambda_{DD}$ [FIT]                     | 0        |
| $\lambda_{DU}$ [FIT]                     | 3.32     |
| PFD <sub>avg</sub> (e.g. for T = 1 year) | 1.46E-05 |

### Proof-Test

#### In order to check the proper function of the device, the following steps have to be carried out

- Demand the safety function by opening the safety circuit. Check that the relay contact (13-14; 23-24; 33-34) opened by activation of the safety function.
- Close the safety circuit and start the device again. Check that the safety contacts (13-14; 23-24; 33-34) closed again. If the device doesn't switch on again, the proof-test failed.

#### ATTENTION:

If the proof-test fails, the device must be replaced. Otherwise there is a risk of loss of functional safety.



CE  
Declaration

### CE Konformitätserklärung EC Declaration of Conformity Déclaration de conformité

**Hersteller:** H. ZANDER GmbH & Co. KG  
**Producer:** Am Gut Wolf 15 • 52070 Aachen • Deutschland  
**Fabricant:**

**Produktgruppe:** Sicherheits-Not-Halt-Schaltgeräte  
**Product Group:** Safety emergency stop switching devices  
**Groupe de produits:** Relais de sécurité d'arrêt d'urgence

| Produkt Name<br>Product Name<br>Nom du produit | Anbringung der CE-Kennzeichnung<br>Affixing of CE marking:<br>Application du marque CE | Zertifikats-Nr.<br>No of Certificate<br>N° du certificat |
|--|--|--|
| SRLC.....2023.....                             | .....  | 01/205/5463.03/23  |
| SR2C.....2023.....                             | .....  | 01/205/5463.03/23  |
| SR3C.....2023.....                             | .....  | 01/205/5463.03/23  |
| SR3D.....2023.....                             | .....  | 01/205/5463.03/23  |
| SR3A.....2023.....                             | .....  | 01/205/5463.03/23  |
| SR3AD.....2023.....                            | .....  | 01/205/5463.03/23  |
| SK3D.....2023.....                             | .....  | 01/205/5463.03/23  |

**Die Produkte stimmen mit den Vorschriften folgender Europäischer Richtlinien überein:**  
The products conform with the essential protection requirements of the following European directives:  
Les produits sont conformes aux dispositions des directives européennes suivantes:

|   |                                    |
|---|------------------------------------|
| <b>2006/42/EG</b> : Maschinenrichtlinie | <b>2011/65/EU</b> :RoHS Richtlinie |
| 2006/42/EG : Machinery directive        | 2011/65/EU: RoHS directive         |
| 2006/42/EG : Directive Machines         | 2011/65/EU: Directive RoHS         |
| <b>2014/30/EU</b> : EMV Richtlinie      |                                    |
| 2014/30/EU : EMC directive              |                                    |
| 2014/30/EU : Directive CEM              |                                    |

**Die Übereinstimmung der bezeichneten Produkte mit den Vorschriften der o.a. Richtlinie wird, falls anwendbar, nachgewiesen durch die vollständige Einhaltung folgender Normen:**  
If applicable, the conformity of the designated products is proved by full compliance with the following standards:  
Le strict respect des norms suivantes confirme, s'il y a lieu, que les produits désignés sont conformes aux dispositions de la directive susmentionnée:

**EN 61326-3-1:2018**                      **EN IEC 61000-6-2:2019**                      **IEC 63000:2018**

**Gemäß Zertifikat der benannten Stelle:**  
According to the certificate of the below mentioned organisation:  
Selon de organisme notifié:

**EN ISO 13849-1:2015**                      **EN ISO 13849-1:2023**                      **IEC 61508 Parts 1-7:2010**

Benannte Stelle / Organisme notifié: Nr. NB 0035  
TÜV Rheinland Industrie Service GmbH  
51105 Köln  
Zertifizierungsstelle für Maschinen

Dokumentationsbeauftragte/-r: Christiane Nittschalk  
Documentation manager  
Autorisé à constituer le dossier technique

Aachen, den 24.10.2023

Dr.-Ing. Marco Zander  
Geschäftsführung  
General Manager  
Direction

Dipl.-Ing. Alfons Austerhoff  
Leiter CE-Konformitätsbewertung  
Manager for EC declaration of conformity  
Responsable évaluation de conformité CE

FT 3/07/03

H. ZANDER GmbH & Co. KG • Am Gut Wolf 15 • 52070 Aachen • Germany  
Tel +49 (0)241 9105010 • Fax +49 (0)241 91050138 • info@zander-aachen.de • www.zander-aachen.de