



Your Advantages

- Simple parameterization, monitoring and diagnosis
- Compact design
- Simultaneous monitoring of up to 9 measured variables
- Large measuring range 3 AC 24 ... 690 V
- Min-, Max-value or window monitoring
- Auxiliary voltage ranges AC/DC 24 ... 240 V or AC 60 ... 400 V
- Early detection of irregularities
- Increases plant availability and productivity
- Differentiated error messages
- Space and cost saving
- Reduced wiring
- Lower investment, operating and maintenance costs

Features


- Multifunctional measuring relay acc. to IEC/EN 60255-1
- With galvanic separated Modbus RTU interface
- Voltage monitoring (1- or 3-phase)
- Current monitoring
- Frequency monitoring
- Power factor cos phi
- Phase sequence, phase failure, asymmetry
- Active, reactive and apparent power
- Start up time delay, response delay
- Adjustable hysteresis 0.2 ... 50 % of the response value
- Error memory
- 2 changeover contacts
- Relay function energized / de-energized on trip parameterizable
- Width 22.5 mm

Product Description

The multifunctional measuring relay UG 9400 of the VARIMETER PRO series allows easy parameter setting, monitoring and diagnosis via a Modbus RTU interface.

The measuring relay simultaneously monitors up to 9 different measured variables such as voltage, voltage asymmetry, current, cos phi, active, apparent and reactive power as well as frequency and phase sequence. The measurement in three-phase and single-phase networks is very easy and without much wiring effort.

Function Diagram

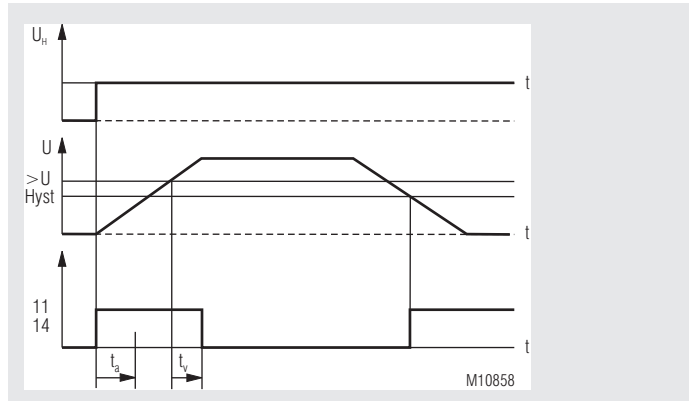

Function: Overvoltage/de-energized on trip


Approvals and Markings




Applications

- Simple monitoring of electrical measured variables in complex and extensive plants
- Voltage dependent switching at under- or overvoltage
- Motor protection on Phase failure
- Transformer protection on asymmetric load
- Frequency monitoring on inverter outputs

Block Diagram

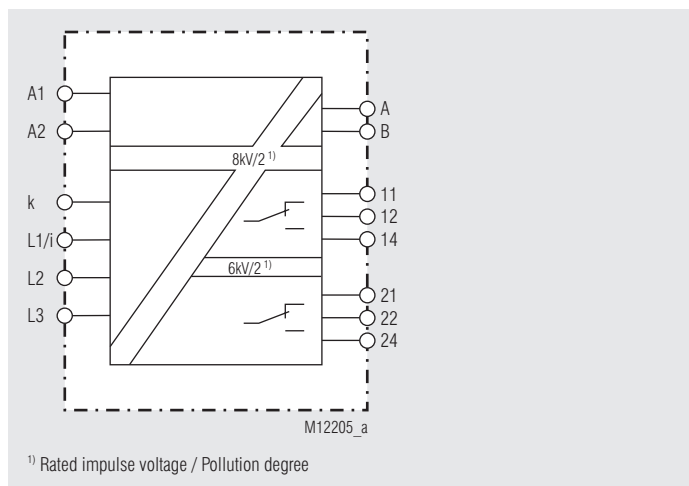

Circuit Diagram

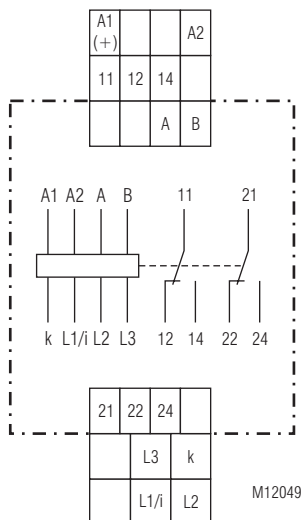

Connection Terminals

Terminal designation	Signal description
A1 (+), A2	Auxiliary voltage AC or DC
L1/i, L2, L3	Voltage measuring input AC
L1/i , k	Current measuring path AC
11, 12, 14	Indicator relay (C/O contact)
21, 22, 24	Indicator relay (C/O contact)
A	Modbus signal A
B	Modbus signal B

Function

After connecting the auxiliary supply to terminals A1-A2 the startup time delay disables the monitoring function so that changes on the input have no influence on the relay output.

One or more measuring values can be assigned to the relay output. If the setting value of at least one function is exceeded the relay switches.

It is possible to assign different values to the different relays so one can be used as pre-warning and the other as alarm output. Relay output 1 switches when actual value exceeds the pre-warning setting of at least one assigned measuring function. If a second setting assigned to relay output 2 with the same measuring function the unit gives an Alarm signal.

Remarks

To provide correct function the measuring voltage on L1/L2 has to be at least 20 V.

Due to the measuring principle a symmetric load on all 3 phases is presumed, as you have it usually with motors.

The unit can also be used for single phase monitoring by bridging terminals L2 and L3.

When using phase sequence evaluation, asymmetry monitoring is recommended.

Indicators

The LED indicates the device status

- Green LED "ON" (perm. on): Supply connected
- Red LED "ERR" (flashing): Failure code of the device
- Yellow LED "BUS" (flashing): When receiving or transmitting Modbus data message with matching device address
- Green LED "REL1" (perm. on): On, when output relay 1 activated
- Green LED "REL2" (perm. on): On, when output relay 2 activated
- Failure code :*) : 9 - Modbus communication failure
10 - Checksum failure EEPROM

*) = Number of flashing pulses in sequence

Reset Function

By sending a reset command a reset can be operated via Modbus

Modbus RTU

For communication between motor controller and a supervising control the Modbus RTU protocol according to Specification V 1.1b3 is used.

Indicator Outputs


Monitoring parameters can be set independently.

The UG 9400 has 2 relay outputs.

Each monitoring function can be assigned to relay 1 and /or relay 2.

Relay function energized / de- energized on trip parameterizable.

Setting

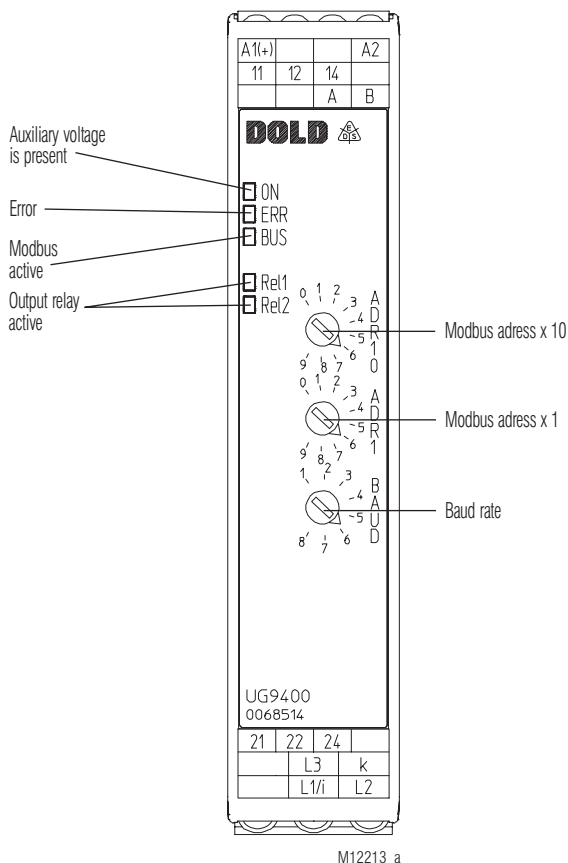

Position	1	2	3	4	5	6	7	8
Potentiometer BAUD								
Baud rate Baud	1200	2400	4800	9600	19200	38400	57600	115200
Response Time	< 50 ms	< 25 ms	< 10 ms	< 5 ms	< 5 ms	< 5 ms	< 5 ms	< 5 ms

Technical Data

Auxiliary Voltage A1/A2

Nominal auxiliary voltage U_H:	AC/DC 24 ... 240 V (0.8 ... 1.1 x U_H) AC 60 ... 400 V (0.8 ... 1.1 x U_H)
Nominal frequency:	50 / 60 Hz
Frequency range:	45 ... 400 Hz
Input current	
at DC 24 V:	50 mA
At AC 240 V:	18 mA

Voltage Measuring Input L1/L2/L3

Nominal voltage:	3 AC 400 V / 690 V
Measuring range U_M:	3 AC 24 ... 690 V (0.8 ... 1.1 x U_M)
Nominal frequency:	50 / 60 Hz
Frequency range:	15 ... 400 Hz

Current Measuring Input i / k

Nominal current:	AC 12 A
Measuring range:	AC 100 mA ... 12 A
Nominal frequency:	50 / 60 Hz
Frequency range:	15 ... 400 Hz

Setting Range

Measuring accuracy at nominal frequency (in % of setting value):	± 4 %
Repeat accuracy:	< 2 %
Temperature influence:	< 1 %
Hysteresis (in % of setting value):	0.2 ... 50 % of response value
Reaction time:	< 350 ms
Adjustable on delay t_v:	0 ... 10 s (in steps of 0.1 s)
Adjustable start up delay t_s:	0.2 ... 10 s (in steps of 0.1 s)

Output Circuit (Rel1: 11/12/14; Rel2: 21/22/24)

Rated output voltage:	AC 230 V
Contacts:	1 changeover contact (Rel1) and 1 changeover contact (Rel2)
Thermal current I_{th}:	See quadratic total current limit curve (max. 4 A per contact)
Switching capacity to AC 15:	
NO contacts:	2 A / AC 230 V IEC/EN 60947-5-1
NC contacts:	1 A / AC 230 V IEC/EN 60947-5-1
To DC 13	
NC contacts:	1 A / DC 24 V IEC/EN 60947-5-1
Electrical life at 4 A, AC 230 V $\cos \varphi = 1$:	1 x 10 ⁵ switching cycles
Short circuit strength	
max. fuse rating:	4 A gG / gL IEC/EN 60947-5-1
Mechanical life:	15 x 10 ⁶ switching cycles

General Data

Nominal operating mode:	Continuous operation
Temperature range	
Operation:	- 20... + 60 °C (device free-standing)
Storage:	- 20... + 60 °C
Altitude:	≤ 2000 m
Clearance and creepage distance	
rated impulse voltage / pollution degree	
Auxiliary voltage / Meas. input:	8 kV / 2 IEC/EN 60664-1
Auxiliary voltage / Bus:	8 kV / 2 IEC/EN 60664-1
Auxiliary voltage / Contacts:	8 kV / 2 IEC/EN 60664-1
Measuring input / Bus:	8 kV / 2 IEC/EN 60664-1
Measuring input / Contacts:	8 kV / 2 IEC/EN 60664-1
Contacts / Bus:	8 kV / 2 IEC/EN 60664-1
Contacts 11,12,14 / 21,22,24:	6 kV / 2 IEC/EN 60664-1
Within contact path:	1.5 kV / 2 IEC/EN 60664-1

Technical Data

EMC

Electrostatic discharge (ESD):	8 kV (air)	IEC/EN 61000-4-2
HF-irradiation		
80 MHz ... 6 GHz:	10 V / m	IEC/EN 61000-4-3
Fast transients:	2 kV	IEC/EN 61000-4-4
Surge voltages		
between		
wires for power supply:	1 kV	IEC/EN 61000-4-5
Between wire and ground:	2 kV	IEC/EN 61000-4-5
HF-wire guided:	10 V	IEC/EN 61000-4-6
Damped oscillatory wave immunity test		
Differential mode voltage:	1 kV	IEC/EN 61000-4-18
Common mode voltage:	2.5 kV	IEC/EN 61000-4-18
Interference suppression:	Limit value class A*)	

*) The device is designed for the usage under industrial conditions (Class A, EN 55011).
When connected to a low voltage public system (Class B, EN 55011) radio interference can be generated. To avoid this, appropriate measures have to be taken.

Degree of protection

Housing:	IP 40	DIN EN 60529
Terminals:	IP 20	DIN EN 60529
Housing:	Thermoplastic with VO behaviour according to UL Subject 94	

Vibration resistance:

Amplitude 0.35 mm, frequency 10 ... 55 Hz	IEC/EN 60068-2-6 EN 60068-1 DIN 46228-1/-2/-3/-4
---	--

Climate resistance:

Wire connections:

Wire connection	
Aux. voltage and relay pluggable screw terminal (PS):	0.25 ... 2.5 mm ² solid or 0.25 ... 2.5 mm ² stranded ferruled

Wire connection

Bus pluggable Twin-cage-clamp-terminal (PT):	0.25 ... 1.5 mm ² solid or 0.25 ... 1.5 mm ² stranded ferruled
--	---

Wire connection

Measuring inputs fixed screw terminal (S):	0.25 ... 2.5 mm ² solid or 0.25 ... 2.5 mm ² stranded ferruled
--	---

Insulation of wires or sleeve length:

8 mm	
Fixing torque:	0.5 ... 0.6 Nm
Mounting:	DIN-rail IEC/EN 60715
Weight:	200 g

Dimensions


Width x height x depth:	22.5 x 105 x 120.3 mm
--------------------------------	-----------------------

Standard Types

UG 9400.12PM 3 AC 24 ... 690 V AC 12 A AC/DC 24 ... 240 V	
Article number:	0068514
• With Modbus RTU interface	
• Measuring voltage:	3 AC 24 ... 690 V
• Nominal voltage:	AC 12 A
• Auxiliary voltage U_H :	AC/DC 24 ... 240 V
• Output:	2 changeover contacts
• Width:	22.5 mm

UG 9400.12PM 3 AC 24 ... 690 V AC 12 A AC 60 ... 400 V	
Article number:	0068515
• With Modbus RTU interface	
• Measuring voltage:	3 AC 24 ... 690 V
• Nominal voltage:	AC 12 A
• Auxiliary voltage U_H :	AC 60 ... 400 V
• Output:	2 changeover contacts
• Width:	22.5 mm

Characteristic

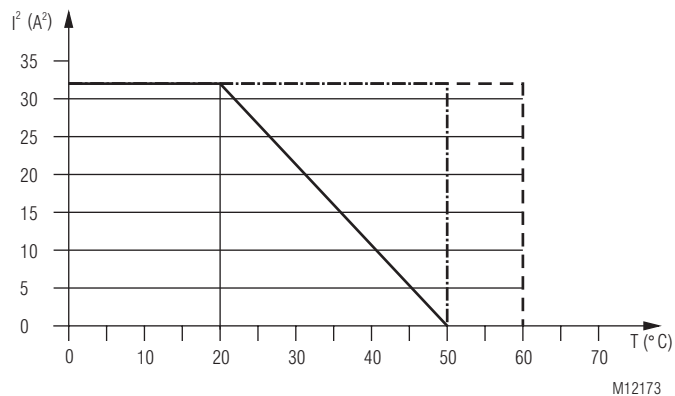

- Device mounted with distance to heat generation components.
- · - · Device mounted with 1cm distance, heated by devices with same load.
- Device mounted without distance, heated by devices with same load.

Quadratic total current limit curve

Setting Facilities

- Potentiometer ADR10: - Unit adress x 10
- Potentiometer ADR1: - Unit adress x 1
- Potentiometer BAUD: - Baud rate

The module address and baud rate is only read after connecting the auxiliary supply!

Setting and Adjustment

Set-up procedure

1. Connect device according to application example.
2. Setting unit address and Baud rate via potentiometer.
3. Power up the unit.
4. Parametrization via Modbus

To connect the current of L1 the Terminals l and k are available. If the current to be measured exceeds the maximum continuous current of the input and external current transformer with secondary current of 1 A or 5 A has to be used.


The secondary current and the primary current has to be set in the corresponding register.

The measuring values (current, active power, apparent power, reactive power) are multiplied with the winding ratio.

The load of the transformer should be ≥ 0.5 VA.

If current is not measured input k remains unconnected.


Safety notes

 **Dangerous voltage.**
Electric shock will result in death or serious injury.


 Disconnect all power supplies before servicing equipment.

- Faults must only be removed when the relay is disconnected
- The user has to make sure that the device and corresponding components are installed and wired according to the local rules and law (TUEV, VDE, Health and safety).
- Settings must only be changed by trained staff taking into account the safety regulations. Installation work must only be done when power is disconnected.
- Observe proper grounding of all components

Connection Examples

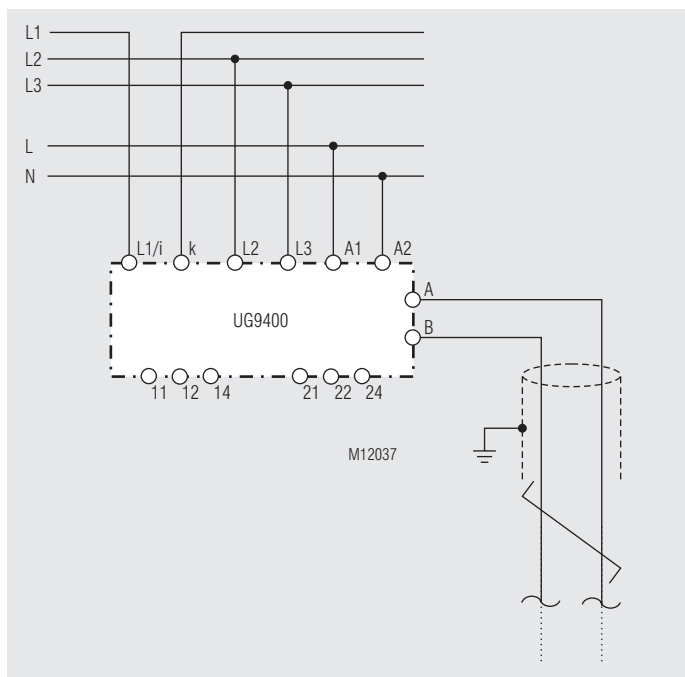

For 3-phase connection

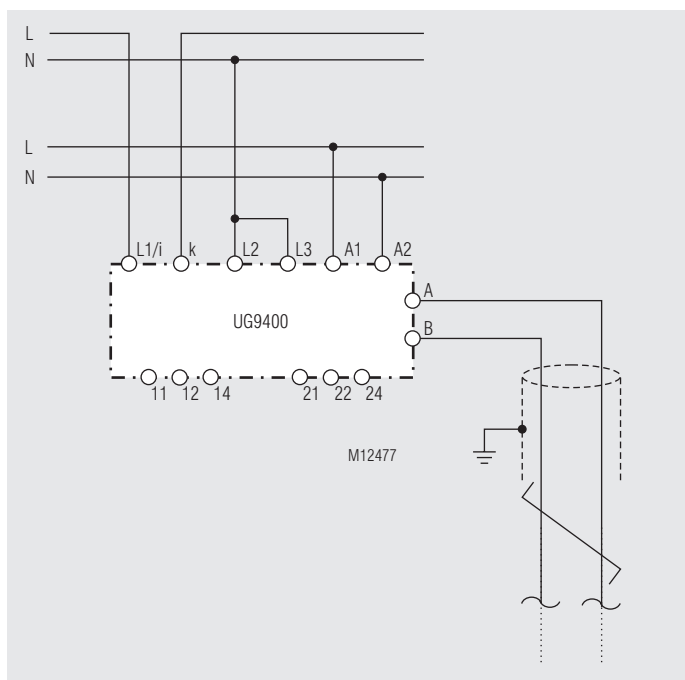

For single-phase connection

Bus Interface

Protocol	Modbus Serielle RTU
Address	1 to 99
Baud rate	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 Baud
Data bit	8
Stop bit	2
Parity	None

More information about the interface, wiring rules, device identification and communication monitoring can be found in the Modbus user manual.

Device configuration

If required the device configuration data can be saved permanently by setting the the Bit "Write configuration to EEPROM". When the auxiliary voltage is applied, the data are copied from the EEPROM into the corresponding holding registers (register block from protocol address 2000). Since the write cycles of an EEPROM are limited, the write process must not be cyclical. In addition, please note that writing the EEPROM takes < 350 ms.

Function-Codes

At UG 9400 the following function codes are implemented

Function-Code	Name
0x01	Read Coils
0x03	Read Holding Register
0x04	Read Input Register
0x05	Write Single Coil
0x06	Write Single Register
0x10	Write Multiple Register

Parameter table

Coils

Register-Address	Protocol-Address	Name	Value range	Initial value	Description	Data type	Access rights
1	0	Reset	0x0000 0xFF00	0x0000	No function Error acknowledgement device error	BIT	Write / read
2	1	Device reset	0x0000 0xFF00	0x0000	No function Device restart	BIT	Write / read
3	2	Write configuration to EEPROM	0x0000 0xFF00	0x0000	No function Save parameters	BIT	Write / read
4	3	Factory setting (after restart of the device)	0x0000 0xFF00	0x0000	No function Factory setting of the parameters	BIT	Write / read
5	4	Reserved	0x0000 0xFF00	0x0000	-	BIT	-
6	5	Fault memory Rel 1	0x0000 0xFF00	0x0000	No function Fault memory acknowledgement relay 1	BIT	Write / read
7	6	Fault memory Rel 2	0x0000 0xFF00	0x0000	No function Fault memory acknowledgement relay 2	BIT	Write / read

Parameter Table

Input Registers

Register-Address	Protocol-Address	Name	Value range	Description	Data type	Access rights
30001	0	Device failure	0 ... 10	0: No failure 9: Communication fault Modbus 10: Checksum failure EEPROM	UINT16	Read
30002	1	State of device	0 ... 3	0: Device initialize 1: Device is ready 2: Device in error mode 3: Device is in the start-up time	UINT16	Read
30003	2	Device flags	0 ... 1024	Bit 0: relay 1 energized Bit 1: relay 2 energized Bit 2: 1-phase mains Bit 3: 3-phase mains Bit 4: clockwise rotating field Bit 5: Reverse power Bit 6: Measuring voltage present Bit 7: Measuring current present Bit 8: Overvoltage Bit 9: Overcurrent	UINT16	Read
30004	3	State Relay 1	0 ... 4194303	Bit 0: Umin Bit 1: Umax Bit 2: < U L1-L2 Bit 3: > U L1-L2 Bit 4: < U L2-L3 Bit 5: > U L2-L3 Bit 6: < U L3-L1 Bit 7: > U L3-L1 Bit 8: Asymmetry Bit 9: < I Bit 10: > I Bit 11: < Cos- Phi Bit 12: > Cos- Phi Bit 13: < P Bit 14: > P Bit 15: < S Bit 16: > S Bit 17: < Q Bit 18: > Q Bit 19: < f Bit 20: > f Bit 21: Incorrect phase sequence	UINT32	Read
30006	5	Error memory relay 1	0 ... 4194303	Error memory of the status relay 1 register	UINT32	Read
30008	7	State Relay 2	0 ... 4194303	Bit 0: Umin Bit 1: Umax Bit 2: < U L1-L2 Bit 3: > U L1-L2 Bit 4: < U L2-L3 Bit 5: > U L2-L3 Bit 6: < U L3-L1 Bit 7: > U L3-L1 Bit 8: Asymmetry Bit 9: < I Bit 10: > I Bit 11: < Cos- Phi Bit 12: > Cos- Phi Bit 13: < P Bit 14: > P Bit 15: < S Bit 16: > S Bit 17: < Q Bit 18: > Q Bit 19: < f Bit 20: > f Bit 21: Incorrect phase sequence	UINT32	Read
30010	9	Error memory relay 2	0 ... 4194303	Error memory of the status relay 2 register	UINT32	Read
30012	11	Current transformer winding ratio	2 ... 2500	Winding ration depending on the primary / secondary current 1/10	UINT16	Read

Parameter Table

Input Registers

Register-Address	Protocol-Address	Name	Value range	Description	Data type	Access rights
32001	2000	Umin	0 ... 7600	1/10V	UINT16	Read
32002	2001	Umax	0 ... 7600	1/10V	UINT16	Read
32003	2002	UL1-L2	0 ... 7600	1/10V	UINT16	Read
32004	2003	UL2-L3	0 ... 7600	1/10V	UINT16	Read
32005	2004	UL3-L1	0 ... 7600	1/10V	UINT16	Read
32006	2005	Asymmetry	0 ... 10000	1/100%	UINT16	Read
32007	2006	Current	0 ... 1200 0 ... 3000 0 ... 15000	1/100A without external CT 1/10A external CT with 1A secondary current 1/10A external CT mit 5A secondary current	UINT16	Read
32008	2007	Cos- Phi	0 ... 100	1/100	UINT16	Read
32009	2008	Active power	0 ... 15700 0 ... 4000 0 ... 20000	W without external CT 1/10kW external CT with 1A secondary current 1/10kW external CT mit 5A secondary current	UINT16	Read
32010	2009	Apparent power	0 ... 15700 0 ... 4000 0 ... 20000	VA without external CT 1/10kVA external CT with 1A secondary current 1/10kVA external CT mit 5A secondary current	UINT16	Read
32011	2010	Reactive power	0 ... 15700 0 ... 4000 0 ... 20000	Var without external CT 1/10kvar external CT with 1A secondary current 1/10kvar external CT mit 5A secondary current	UINT16	Read
32012	2011	Frequency	0 ... 4000	1/10Hz	UINT16	Read

Parameter Table

Holding Registers

Register-Address	Protocol-Address	Name	Value range	Initial value	Description	Data type	Access rights
40001	0	Control word 1	0 ... 127	0	Bit 0 = Reset Bit 1 = Device reset Bit 2 = Write configuration to EEPROM Bit 3 = Factory settings (after device restart) Bit 4 = Reserved Bit 5 = Fault memory acknowledgement relay 1 Bit 6 = Fault memory acknowledgement relay 2	UINT16	Write / read
40002	1	Timeout release	0 ... 1	0	Bit 0 = Enable	UINT16	Write / read
40003	2	Timeout	100 ... 10000 0 ... 10000	1000	Timeout Value in ms (schreiben) Timeout Value in ms (read)	UINT16	Write / read

Register-Address	Protocol-Address	Name	Value range	Initial value	Description	Data type	Access rights
42001	2000	Start up time delay	200 ... 10000	200	Start-up time delay in ms	UINT16	Write / read
42002	2001	External current transformer	1, 2, 4	1	Bit 0 = Without current transformer Bit 1 = 1A secondary current Bit 2 = 5A secondary current	UINT16	Write / read
42003	2002	External current transformer primary current	10 10... 2500 10... 12500	10	Primary current of the external current transformer in 1/10A without current transformer 1A secondary current 5A secondary current	UINT16	Write / read
42004	2003	Reserved	0	0	-	UINT16	Write / read
42005	2004	Reserved	0	0	-	UINT16	Write / read
42006	2005	Relay 1: Umin	0 ... 7600	0	Undervoltage response value Lowest phase voltage L1, L2 or L3 (undervoltage relay) 1/10 V	UINT16	Write / read
42007	2006	Relay 1: Umax	0 ... 7600	0	Overvoltage response value maximum phase to phase voltage L1, L2 or L3 (overvoltage relay) 1/10 V	UINT16	Write / read
42008	2007	Relais 1: < UL1-L2	0 ... 7600	0	Response value phase conductor voltage L1-L2 (undervoltage relay) 1/10V	UINT16	Write / read
42009	2008	Relais 1: > UL1-L2	0 ... 7600	0	Response value phase conductor voltage L1-L2 (overvoltage relay) 1/10V	UINT16	Write / read
42010	2009	Relais 1: < UL2-L3	0 ... 7600	0	Response value phase conductor voltage L2-L3 (undervoltage relay) 1/10V	UINT16	Write / read
42011	2010	Relais 1: > UL2-L3	0 ... 7600	0	Response value phase conductor voltage L2-L3 (overvoltage relay) 1/10V	UINT16	Write / read
42012	2011	Relais 1: < UL3-L1	0 ... 7600	0	Response value phase conductor voltage L3-L1 (undervoltage relay) 1/10V	UINT16	Write / read
42013	2012	Relais 1: > UL3-L1	0 ... 7600	0	Response value phase conductor voltage L3-L1 (overvoltage relay) 1/10V	UINT16	Write / read
42014	2013	Relay 1: Asymmetry	0 ... 10000	0	Response value voltage asymmetry, deviation in % from the highest to the lowest outer conductor voltage 1/100%	UINT16	Write / read
42015	2014	Relay 1: < I	0 ... 1200 0 ... 3000 0 ... 15000	0	Response value current in current path L1 (undercurrent relay) 1/100A without external current transformer 1/10A Ext. CT with 1A secondary current 1/10A Ext. CT with 5A secondary current	UINT16	Write / read
42016	2015	Relay 1: > I	0 ... 1200 0 ... 3000 0 ... 15000	0	Response value current in current path L1 (overcurrent relay) 1/100A without external current transformer 1/10A Ext. CT with 1A secondary current 1/10A Ext. CT with 5A secondary current	UINT16	Write / read

Parameter Table

Holding Registers

Register-Address	Protocol-Address	Name	Value range	Initial value	Description	Data type	Access rights
42017	2016	Relay 1: < Cos- Phi	0 ... 100	0	Response value Phase shift between Current and voltage (underload monitor) 1/100	UINT16	Write / read
42018	2017	Relay 1: > Cos- Phi	0 ... 100	0	Response value Phase shift between Current and voltage (overload monitor) 1/100	UINT16	Write / read
42019	2018	Relay 1: < P	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value active power 3-phase (underload guard) W without external current transformer 1/10kW Ext. CT with 1A secondary current 1/10kW Ext. CT with 5A secondary current	UINT16	Write / read
42020	2019	Relay 1: > P	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value active power 3-phase (overload guard) W without external current transformer 1/10kW Ext. CT with 1A secondary current 1/10kW Ext. CT with 5A secondary current	UINT16	Write / read
42021	2020	Relay 1: < S	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value apparent power 3-phase W without external current transformer 1/10kVA Ext. CT with 1A secondary current 1/10kVA Ext. CT with 5A secondary current	UINT16	Write / read
42022	2021	Relay 1: > S	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value apparent power 3-phase W without external current transformer 1/10kVA Ext. CT with 1A secondary current 1/10kVA Ext. CT with 5A secondary current	UINT16	Write / read
42023	2022	Relay 1: < Q	0 ... 15700 0 ... 4000 0 ... 20000	0	Reactive power response value 3-phase var without external current transformer 1/10var Ext. CT with 1A secondary current 1/10var Ext. CT with 5A secondary current	UINT16	Write / read
42024	2023	Relay 1: > Q	0 ... 15700 0 ... 4000 0 ... 20000	0	Reactive power response value 3-phase var without external current transformer 1/10var Ext. CT with 1A secondary current 1/10var Ext. CT with 5A secondary current	UINT16	Write / read
42025	2024	Relay 1: < f	0 ... 4000	0	Response value frequency (underfrequency) 1/10 Hz	UINT16	Write / read
42026	2025	Relay 1: > f	0 ... 4000	0	Response value frequency (overfrequency) 1/10 Hz	UINT16	Write / read
42027	2026	Relay 1: Umin	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42028	2027	Relay 1: Umax	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42029	2028	Relais 1: < UL1-L2	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42030	2029	Relais 1: > UL1-L2	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42031	2030	Relais 1: < UL2-L3	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42032	2031	Relais 1: > UL2-L3	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42033	2032	Relais 1: < UL3-L1	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42034	2033	Relais 1: > UL3-L1	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42035	2034	Relay 1: Asymmetry	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42036	2035	Relay 1: < I	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42037	2036	Relay 1: > I	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42038	2037	Relay 1: < Cos- Phi	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42039	2038	Relay 1: > Cos- Phi	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42040	2039	Relay 1: < P	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42041	2040	Relay 1: > P	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42042	2041	Relay 1: < S	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read

Parameter Table

Holding Registers

Register-Address	Protocol-Address	Name	Value range	Initial value	Description	Data type	Access rights
42043	2042	Relay 1: > S	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42044	2043	Relay 1: < Q	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42045	2044	Relay 1: > Q	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42046	2045	Relay 1: < f	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42047	2046	Relay 1: > f	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42048	2047	Relay 1: Hysteresis	2 ... 500	40	Hysteresis of the response value 1/10 %	UINT16	Write / read
42049	2048	Relay 1: tv	0 ... 100	0	Response delay 1/10 s	UINT16	Write / read
42050	2049	Relay 1: Phase sequence	0 ... 1	0	0: Phase sequence Off 1: Phase sequence On	UINT16	Write / read
42051	2050	Relay 1: A / R	0 ... 1	0	0: De-energized on trip 1: Energized on trip	UINT16	Write / read
42052	2051	Relay 1: Sp	0 ... 1	0	0: Fault memory Off 1: Fault memory On	UINT16	Write / read
42053	2052	Relay 2: Umin	0 ... 7600	0	Undervoltage response value Lowest phase voltage L1, L2 or L3 (undervoltage relay) 1/10 V	UINT16	Write / read
42054	2053	Relay 2: Umax	0 ... 7600	0	Overvoltage response value max. phase to phase voltage L1, L2 or L3 (overvoltage relay) 1/10 V	UINT16	Write / read
42055	2054	Relais 2: < UL1-L2	0 ... 7600	0	Response value phase conductor voltage L1-L2 (undervoltage relay) 1/10V	UINT16	Write / read
42056	2055	Relais 2: > UL1-L2	0 ... 7600	0	Response value phase conductor voltage L1-L2 (overvoltage relay) 1/10V	UINT16	Write / read
42057	2056	Relais 2: < UL2-L3	0 ... 7600	0	Response value phase conductor voltage L2-L3 (undervoltage relay) 1/10V	UINT16	Write / read
42058	2057	Relais 2: > UL2-L3	0 ... 7600	0	Response value phase conductor voltage L2-L3 (overvoltage relay) 1/10V	UINT16	Write / read
42059	2058	Relais 2: < UL3-L1	0 ... 7600	0	Response value phase conductor voltage L3-L1 (undervoltage relay) 1/10V	UINT16	Write / read
42060	2059	Relais 2: > UL3-L1	0 ... 7600	0	Response value phase conductor voltage L3-L1 (overvoltage relay) 1/10V	UINT16	Write / read
42061	2060	Relay 2: Asymmetry	0 ... 10000	0	Response value voltage asymmetry, deviation in % from the highest to the lowest outer conductor voltage 1/100%	UINT16	Write / read
42062	2061	Relay 2: < I	0 ... 1200 0 ... 3000 0 ... 15000	0	Response value current in current path L1 (undercurrent relay) 1/100A without external current transformer 1/10A Ext. CT with 1A secondary current 1/10A Ext. CT with 5A secondary current	UINT16	Write / read
42063	2062	Relay 2: > I	0 ... 1200 0 ... 3000 0 ... 15000	0	Response value current in current path L1 (overcurrent relay) 1/100A without external current transformer 1/10A Ext. CT with 1A secondary current 1/10A Ext. CT with 5A secondary current	UINT16	Write / read
42064	2063	Relay 2: < Cos- Phi	0 ... 100	0	Response value Phase shift between Current and voltage (underload monitor) 1/100	UINT16	Write / read
42065	2064	Relay 2: > Cos- Phi	0 ... 100	0	Response value Phase shift between Current and voltage (overload monitor) 1/100	UINT16	Write / read

Parameter Table

Holding Registers

Register-Address	Protocol-Address	Name	Value range	Initial value	Description	Data type	Access rights
42066	2065	Relay 2: < P	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value active power 3-phase (underload guard) W without external current transformer 1/10kW Ext. CT with 1A secondary current 1/10kW Ext. CT with 5A secondary current	UINT16	Write / read
42067	2066	Relay 2: > P	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value active power 3-phase (overload guard) W without external current transformer 1/10kW Ext. CT with 1A secondary current 1/10kW Ext. CT with 5A secondary current	UINT16	Write / read
42068	2067	Relay 2: < S	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value apparent power 3-phase W without external current transformer 1/10kVA Ext. CT with 1A secondary current 1/10kVA Ext. CT with 5A secondary current	UINT16	Write / read
42069	2068	Relay 2: > S	0 ... 15700 0 ... 4000 0 ... 20000	0	Response value apparent power 3-phase W without external current transformer 1/10kVA Ext. CT with 1A secondary current 1/10kVA Ext. CT with 5A secondary current	UINT16	Write / read
42070	2069	Relay 2: < Q	0 ... 15700 0 ... 4000 0 ... 20000	0	Reactive power response value 3-phase var without external current transformer 1/10var Ext. CT with 1A secondary current 1/10var Ext. CT with 5A secondary current	UINT16	Write / read
42071	2070	Relay 2: > Q	0 ... 15700 0 ... 4000 0 ... 20000	0	Reactive power response value 3-phase var without external current transformer 1/10var Ext. CT with 1A secondary current 1/10var Ext. CT with 5A secondary current	UINT16	Write / read
42072	2071	Relay 2: < f	0 ... 4000	0	Response value frequency (underfrequency) 1/10 Hz	UINT16	Write / read
42073	2072	Relay 2: > f	0 ... 4000	0	Response value frequency (overfrequency) 1/10 Hz	UINT16	Write / read
42074	2073	Relay 2: Umin	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42075	2074	Relay 2: Umax	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42076	2075	Relais 2: < UL1-L2	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42077	2076	Relais 2: > UL1-L2	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42078	2077	Relais 2: < UL2-L3	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42079	2078	Relais 2: > UL2-L3	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42080	2079	Relais 2: < UL3-L1	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42081	2080	Relais 2: > UL3-L1	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42082	2081	Relay 2: Asymmetry	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42083	2082	Relay 2: < I	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42084	2083	Relay 2: > I	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42085	2084	Relay 2: < Cos- Phi	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42086	2085	Relay 2: > Cos- Phi	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42087	2086	Relay 2: < P	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42088	2087	Relay 2: > P	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42089	2088	Relay 2: < S	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42090	2089	Relay 2: > S	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42091	2090	Relay 2: < Q	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read

Parameter Table

Holding Registers

Register-Adress	Protocol-Adress	Name	Value range	Initial value	Description	Data type	Access rights
42092	2091	Relay 2: > Q	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42093	2092	Relay 2: < f	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42094	2093	Relay 2: > f	0 ... 1	0	0: Response value Off 1: Response value On	UINT16	Write / read
42095	2094	Relay 2: Hysteresis	2 ... 500	40	Hysteresis of the response value 1/10 %	UINT16	Write / read
42096	2095	Relay 2: tv	0 ... 100	0	Response delay 1/10 s	UINT16	Write / read
42097	2096	Relay 2: Phase sequence	0 ... 1	0	0: Phase sequence Off 1: Phase sequence On	UINT16	Write / read
42098	2097	Relay 2: A / R	0 ... 1	0	0: De-energized on trip 1: Energized on trip	UINT16	Write / read
42099	2098	Relay 2: Sp	0 ... 1	0	0: Fault memory Off 1: Fault memory On	UINT16	Write / read